


Anschlussbelegungen

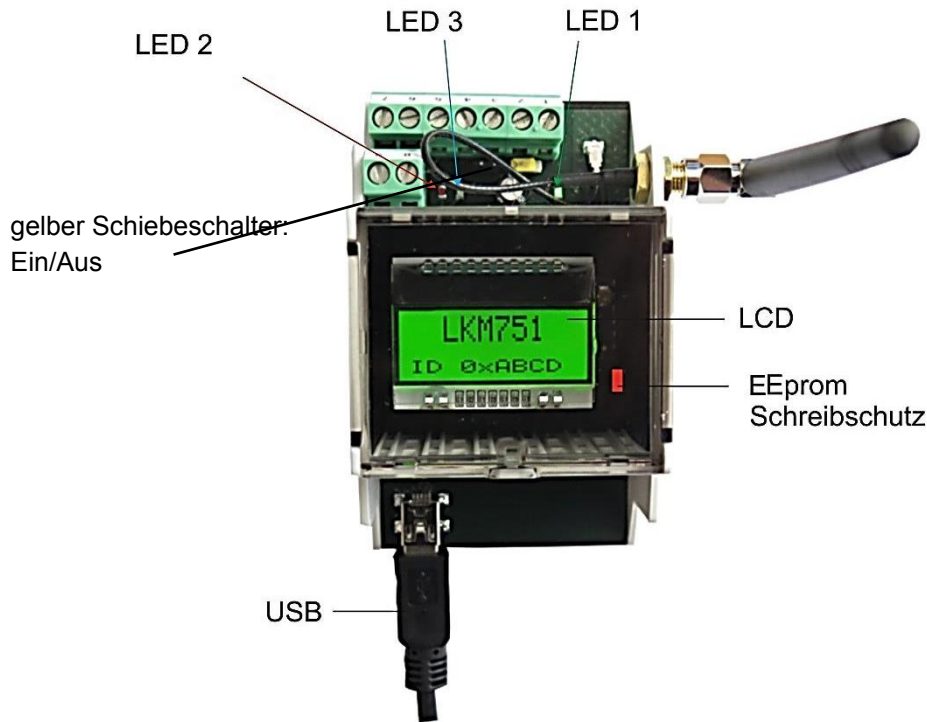

1.1 Anschlussbelegung des Empfängers LKM761

1	→	GND	8	→	K4.2
2	→	24V	9	→	K4.1
3	→	B RS485	10	→	K3.2
4	→	A RS485	11	→	K3.1
5	→	GND	12	→	K2.2
6	→	K5.1 Alarm / Low Bat	13	→	K2.1
7	→	K5.2 Alarm / Low Bat	14	→	K1.2
			15	→	K1.1

1.2 Anschlussbelegung des Funksenders LKM763/4x24VDC

1	→	n.c.	4	→	E3 24V	Anschlussklemme + 24V - GND
2	→	E1 24V	5	→	E4 24V	
3	→	E2 24V	6	→	GND	

1.3 Zuordnung LKM763 24V-Eingänge zu LKM761 Relaisausgänge

E1	→	K1.1 / K1.2
E2	→	K2.1 / K2.2
E3	→	K3.1 / K3.2
E4	→	K4.1 / K4.2

Anschlussbelegungen

1.4 Anschlussbelegung des Funksenders LKM763 mit 4..20mA Eingang

